




measurement in motion

**(**815) 249-9840

1741 Industrial Drive
 Unit 6
 Sterling, IL 61081 USA

- hqscales.com
- ⊠ sales@hqscales.com

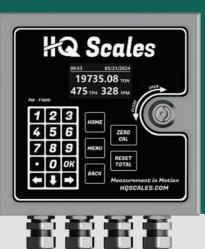


# WIFI INTEGRATOR

## WEB PAGE

The HQ Integrator comes equipped with WiFi. Simply use your smart phone's web browser to see real time data. Alternatively connect to a local area network and view on your PC. No subscription necessary.

- Rate & Speed
- Daily Report
- Scale Totals
- Scale Sensor Readings

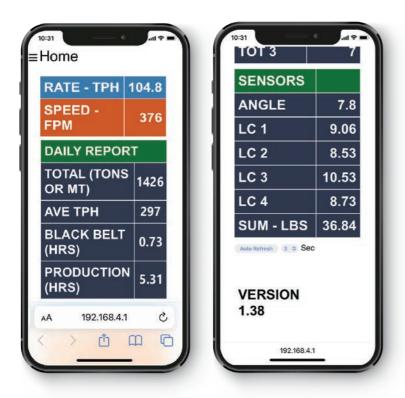





#### **CUSTOMIZE** Define Scale Name, Material, and Job

((1-

#### **WIFI RANGE**

+/- 50ft with line of sight or connect the scale to your local network



#### REPORTING

Monitor the scale via the webpage send PDF's via text or email



### EASE OF USE

Simple User Interface

## **INTEGRATOR SPECS**



Simple Configuration and Calibration

Easy To Use Interface for Daily Operation

Compatible with Most Other Conveyor Belt Scale Brands

- Rugged Outdoor Steel Enclosure
- NEMA 4X
- 12-24VDC or 110-220 VAC
- 4 Load Cell Inputs
- 1 Speed Sensor Input
- 1 Angle Sensor Input
- Ethernet Port
- Built In WiFi Webpage
- Modbus TCP
- RS485
- Accessory Power Ports
- Scoreboard Compatible
- Optional IO Board
  2 Digital Outputs
  2 Analog 4-20mA Outputs

## **NETWORK SETUP**

Customers can easily customize the network settings to fit their own requirements.

- WiFi SSID is the Integrator Serial Number
- Modify the Network settings when connecting to Wireless or Hardwired Networks

Í	11:54	
	NETWORK SETUP	
	WIFI IP	192.168.4.1
	WIFI SSID	HQ-WIFI-10107
	WIFI Password	12345678
		■ Secure WPA2
	Static IP	🛛 Enable
L	IP Address	192.168.1.50
	Subnet Mask	255.255.255.0
	Gateway	192.168.1.1
	Primary DNS	192.168.1.1
	Secondary DNS	192.168.1.1
	SAVE	
192.168.4.1		

## **EXTEND WIFI RANGE**

Add a wireless repeater to extend the wifi range up to 500ft.

